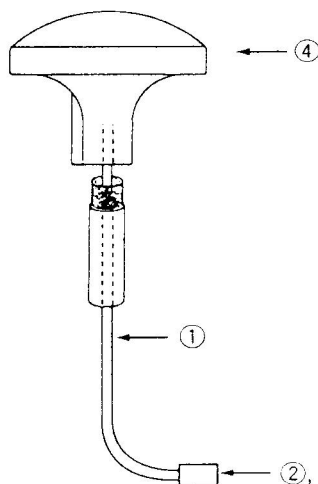
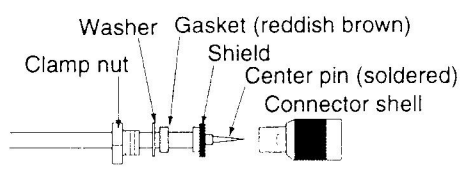


CAUTION SHEET FOR GP-31/GP-36

The importance of a thorough installation cannot be overemphasized. Without a thorough installation optimum performance cannot be expected. Please follow the guidelines below when installing the equipment.

Antenna Cable, Antenna Unit (Chapter 9)

- 
- ① **DO NOT CUT THE ANTENNA CABLE!**
- ② To pass the antenna cable through a hole which is not large enough to pass the connector, you may unfasten the connector with a needle nose pliers and 3/8-inch open-end wrench. Refasten it as shown below, after running the cable through the hole.
- 
- ③ Short the pin and shield (connector housing) to prevent damage to the antenna unit.
- ④ Fasten the pipe to the antenna unit by turning the pipe; not the antenna. Fastening by turning the antenna unit will cause cable twist and plate stress on the connector.

Connection to a PC (page 7-10)

Your equipment provides a wiring diagram which shows how to connect the equipment to a PC, with a DSUB 9-pin connector (EIA-574). You may display the diagram as follows:

1. Press the [MENU] key once or twice to open the menu.
2. Select I/O SETUP with the cursor pad and press the [ENT] key.
3. Select WIRING INFO with the cursor pad and press the [ENT] key to display the wiring info display.

WIRING INFO			
1 TD-H	WHITE	PC/AT DSUB-9	
2 TD-C/SG	BLUE	5 GND	
3 SD	YELLOW	2 RXD	
4 RD	GREEN	3 TXD	
5 +	RED	4 DTR	
6	BLACK	6 DSR	
7 FG		7 RTS	
		8 CTS	
GP-31/36 12/24VDC			

Note: This diagram shows the connection with a DSUB 9-pin connector. For the connection with a DSUB 25-pin connector, see page 7-10.